

# Mermade™

## BLOW DRY BRUSH MANUAL

hello@mermadehair.com


@mermade.hair mermadehair.com #mermadehair




VIEW INSTRUCTIONS  
& REGISTER  
WARRANTY

CONSULTER LES INSTRUCTIONS ET  
ENREGISTRER LA GARANTIE



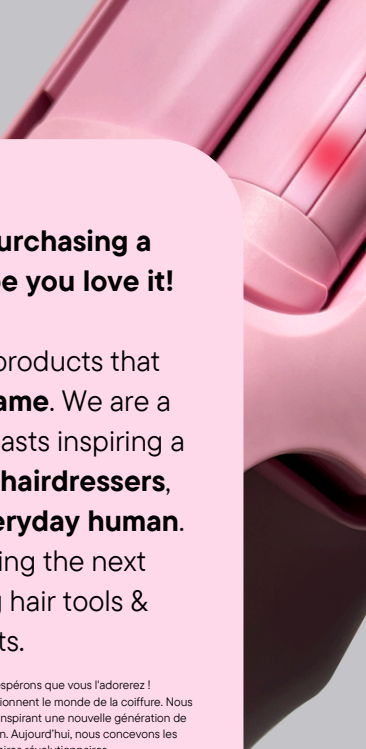

**Thank you for purchasing a  
Mermade. We hope you love it!**

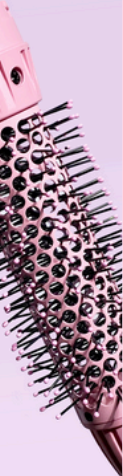

We make tools & products that  
change the **hair game**. We are a  
team of hair enthusiasts inspiring a  
new generation of **hairdressers**,  
**stylists** and the **everyday human**.

Now, we're creating the next  
**game-changing** hair tools &  
products.

Merci d'avoir acheté un Mermade. Nous espérons que vous l'adorerez !  
Nous créons des outils et des produits qui révolutionnent le monde de la coiffure. Nous  
sommes une équipe de passionnés de cheveux inspirant une nouvelle génération de  
coiffeurs, stylistes et de personnes du quotidien. Aujourd'hui, nous concevons les  
prochains outils et produits capillaires révolutionnaires.



Mermade™



MERMADE HAIR PTY LTD 1/649 BEAUFORT ST, MT LAWLEY, WA, 6050

QUESTIONS OR COMMENTS:

E: HELLO@MERMADEHAIR.COM

W: WWW.MERMADEHAIR.COM

PH: (08) 6118 8408

MERMADE ENRP BV | KROONWIEL 2, 6003BT WEERT, NETHERLANDS

*Mermade™*

**ANTI-SCALD COOL TIPS**  
PLAQUES ANTI-BRÛLURE

**FLEXIBLE NYLON BRISTLES**  
POILS FLEXIBLES EN NYLON

**THREE HEAT SETTINGS**  
TROIS NIVEAUX DE CHALEUR

**IONIC AIR FLOW TO DE-FRIZZ**  
FLUX D'AIR IONIQUE POUR DÉFRISER

**POWER BUTTON**  
BOUTON D'ALIMENTATION

**2-YEAR WARRANTY**  
2 ANS DE GARANTIE

**WET OR DRY USE**  
CHEVEUX SECS OU HUMIDES



**INTERCHANGEABLE MODEL**  
INSERT FRENCH



## THIS MANUAL PROVIDES SAFETY INSTRUCTIONS, DIRECTIONS AND CARE INSTRUCTIONS. PLEASE READ SAFETLY.

**PRODUCT:** Blow Dry Brush

**MODEL NUMBER/S:** MH1035 MH1035 MH1035 MH1038 MH1038 MH1038 MH3033 MH1037 MH1037 MH1037 MH1036 MH1036 MH1036 MH1039 MH1039 MH1039

**WATTAGE/VOLTAGE:** SINGLE VOLTAGE; **EU/UK/AU:** 220-240V,50-60Hz, 1200W; **US/CA:** 125V, 60Hz, 1000W

**PRODUCT:** Interchangeable Blow Dry Brush

**MODEL NUMBER/S:** MH6001 MH7015 MH6001 MH7016 MH7002 MH7017 MH7003 MH7018 MH7003 MH7019 MH6001 MH7005 MH7020 MH7016 MH8031 MH7008 MH7021 MH7003 MH7001 MH7022 MH7001 MH7001 MH7023 MH7001 MH7001 MH7024

**WATTAGE/VOLTAGE:** SINGLE VOLTAGE **EU/UK/AU:** 220-240V 50-60Hz 1200W **USA/CAN:** 125V 60Hz 1200W

### TEMPERATURE/POWER SETTINGS

- Low: Low heat, high speed 25,000RPM 140°F/60°C
- Medium: Medium heat, medium speed 16,400RPM 203°F/95°C
- High: High heat, high speed 25,000RPM 239°F/115°C

We have low heat & high speed so you can perform a cool blowdry with max intensity.

### BLOW DRY BRUSH OPERATING INSTRUCTIONS

1. Plug the blow dry brush into the socket. Ensure hair is damp & not soaking wet.
2. Choose your heat & power setting. For damaged or hair thin hair, use a lower setting.
3. Apply heat protectant spray to each section.
4. Brush slowly away from the head. Continue doing this to remove moisture and dry each section.
5. Wrapping the hair around the barrel will give curve and bounce. Twist the hair as you unravel the brush. Repeat this process for all layers and sections of hair. For extra volume, apply the brush under each hair section & hold for a few seconds.
6. Once you have finished drying your hair, slide the button down to 'OFF'. Allow the Blow Dry Brush to cool down completely before stowing away.
7. Remove hair & product build up weekly to ensure the appliance stays in good working order.

### INTERCHANGEABLE BLOW DRY BRUSH OPERATING INSTRUCTIONS

HOW TO FIT, ATTACH & DETACH YOUR ATTACHMENTS:

1. You have three attachments:
  - a. Root Dryer - Use this to dry off the hair and remove moisture from the roots. Use to get the hair to 80% dry.
  - b. Large Head - Use the larger attachment to dry large sections of hair for volume & shine.
  - c. Small Head - Use for more curl & shape in the hair.
2. Simply hold down the release button and place the attachment into the handle on a 45-degree angle.
3. Keeping the release button down, turn/rotate the attachment anti-clockwise till you cannot turn it anymore and it is in position.
4. To remove, simply hold down the release button and turn clockwise 45-degrees.
5. Be sure to not touch the attachments when hot and always use the cool tip to handle as the barrel will get hot after use.

### OPERATING INSTRUCTIONS

1. Plug the blow dry brush into the socket. Ensure hair is damp & not soaking wet.
2. Choose your heat & power setting. For damaged or hair thin hair, use a lower setting.
3. Dry the roots with the pre-drying root attachment
4. Choose the larger oval barrel attachment. Brush slowly away from the head. Continue doing this to remove moisture and dry each section. Wrapping the hair around the barrel will give curve and bounce. Twist the hair as you unravel the brush. Repeat this process for all layers and sections of hair. For extra volume, apply the brush under each hair section & hold for a few seconds.
5. Use the smaller barrel attachment for more curl & shape. Be careful when wrapping the hair up to wrap it evenly and straight, otherwise it may tangle if on an angle.

6. Once you have finished drying your hair, slide the button down to 'OFF'. Allow the Blow Dry Brush to cool down completely before stowing away. Remove hair & product build up weekly to ensure the appliance stays in good working order.

**WARNING:** Always do a test 1cm section at the back of your hair to ensure the proper setting for your hair type & to ensure the tool is working correctly & you understand how it functions. Place on a thermal/heat resistant surface.



**AS WITH MOST ELECTRICAL MACHINES, ELECTRICAL PARTS ARE ELECTRICALLY LIVE EVEN WHEN THE SWITCH IS OFF. TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

1. Always unplug appliance immediately after using. An appliance should never be left unattended when it is plugged in.
2. Do not use while bathing or sleeping.
3. Do not place or store the machine where it can fall or be pulled into a tub or sink.
4. Do not place in or drop in water or any other liquid.
5. If the tool falls into water, unplug it immediately. Do not reach into the water.
6. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
7. Always place the appliance on a heat-resistant, stable flat surface.
8. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
9. Keep cord away from the heated surfaces. Do not wrap the cord around the appliance.
10. Do not use an extension cord.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

### ATTENTION

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
3. Keep appliance out of reach from young children, particularly during use and cool down.
4. Never leave appliance unattended when it is connected to a power supply. Always place the appliance on a heat-resistant, stable flat surface.
5. Do not use on wet, damp or synthetic hair.
6. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
7. Always do a strand test before using on your hair as heat can affect some hair colour, in particular on freshly coloured, grey or toned hair.

### MAINTENANCE

1. To clean the unit, be sure the unit is cool and unplugged. Wipe the bristles and barrels with a damp cloth. Remove any hair. If hair is caught inside the tool, do not continue using the tool.
2. Do not attempt to repair the appliance yourself. This appliance has no user serviceable parts.
3. Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.
4. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.



### SAFETY & RECYCLING

1. Take extra care to ensure the hot plates do not contact skin or eyes.
2. Use a mirror when using the appliance to assist with safe usage.
3. Do not place tool on surfaces that are not heat resistant.
4. Polythene bags over the product and packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

5. This appliance may not be treated as household waste. It should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service. For EU/UK disposal WEEE (Waste from Electrical and Electronic Equipment) requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately in order to optimise the recovery and recycling of the materials from which they are made and to reduce the impact on human health and the environment.

#### **LIMITED 2 YEAR GLOBAL WARRANTY**

Mermade Hair warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, Mermade Hair will replace item. Email [hello@mermadehair.com](mailto:hello@mermadehair.com) for Warranty issues and provide the batch code found on the power cord. This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

MERMADE HAIR SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES OR REGISTER YOUR WARRANTY ONLINE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow that exclusion or limitation of incidental, special, or consequential damages.

#### **SAVE THESE INSTRUCTIONS**



*Mermade™*

**MANUFACTURER:**

**MERMADE HAIR PTY LTD**

1/649 BEAUFORT ST, MT LAWLEY, WA, 6050

**MERMADE EURP BV**

KROONWIEL 2, 6003BT WEERT, NETHERLANDS

**QUESTIONS OR COMMENTS:**

E: [HELLO@MERMADEHAIR.COM](mailto:HELLO@MERMADEHAIR.COM)

W: [WWW.MERMADEHAIR.COM](http://WWW.MERMADEHAIR.COM)

PH: (08) 6118 8408