

Mermade™

VIEW INSTRUCTIONS
& REGISTER
WARRANTY

CONSULTER LES INSTRUCTIONS ET
ENREGISTRER LA GARANTIE



DOUBLE WAVER MANUAL

25mm/1" & 32mm/1.25"

hello@mermadehair.com

[@mermade.hair](https://www.instagram.com/mermade.hair) [mermadehair.com](https://www.mermadehair.com) [#mermadehair](https://www.facebook.com/mermadehair)



**Thank you for purchasing a
Mermade. We hope you love it!**

We make tools & products that
change the **hair game**. We are a
team of hair enthusiasts inspiring a
new generation of **hairstylists**,
stylists and the **everyday human**.

Now, we're creating the next
game-changing hair tools &
products.

Merci d'avoir acheté un Mermade. Nous espérons que vous l'adorerez !
Nous créons des outils et des produits qui révolutionnent le monde de la coiffure. Nous
sommes une équipe de passionnés de cheveux inspirant une nouvelle génération de
coiffeurs, stylistes et de personnes du quotidien. Aujourd'hui, nous concevons les
prochains outils et produits capillaires révolutionnaires.

Mermade™

MERMADE HAIR PTY LTD 1/649 BEAUFORT ST. MT-LAWLEY, WA-6050

QUESTIONS OR COMMENTS:

E: HELLO@MERMADEHAIR.COM

W: WWW.MERMADEHAIR.COM

PH: (08) 6118 8408

MERMADE EURP BV, KROONWIEL 2. 6003BT WEERT, NETHERLANDS

Mermaid™

INSTANT WAVES

ONDULATIONS IMMÉDIATES

ANTI-SCALD PLATES

PLAQUES ANTI-BRÛLURE

32MM/1.25" / 25MM/1" CERAMIC PLATES

PLAQUES EN CÉRAMIQUE DE 32MM/1.25" / 25MM/1"

VARIABLE TEMPERATURE

TEMPÉRATURE VARIABLE

WORLDWIDE UNIVERSAL VOLTAGE

TENSION UNIVERSELLE

60-MIN AUTO SHUT-OFF

EXTINCTION AUTO APRÈS 60 MIN

2-YEAR WARRANTY

2 ANS DE GARANTIE

TEMPERATURE CONTROL

CONTRÔLE DE LA TEMPÉRATURE

POWER BUTTON

BOUTON D'ALIMENTATION



THIS MANUAL PROVIDES SAFETY INSTRUCTIONS, DIRECTIONS AND CARE INSTRUCTIONS. PLEASE READ SAFELY.

PRODUCT: Double Waver / Double Waver Max

MODEL NUMBER/S: MH4100 MH4104 MH4108 MH4101 MH4105 MH4109 MH4102 MH4106 MH4110 MH4103 MH4107 MH4127 MH4136 MH4137 MH4138 MH4128 MH4130 MH4132 MH4134 MH4129 MH4131 MH4133 MH4135

TEMPERATURE: 140°C-220°C / 280°F-430°F

WATTAGE/VOLTAGE: Worldwide Voltage, 100-240V, 50-60Hz, 80W, 100-240V, 50-60Hz, 95W

OPERATING INSTRUCTIONS

1. Plug the waver into the socket
2. Press down the power button to turn ON. Press the power button to increase or decrease the temperature. The light will flash until desired temperature is reached.
3. Start by dividing hair into sections. Smaller sections will create more defined waves. Spray each section liberally with a heat/thermal protectant. Taking one section at a time, start at the top close to the roots and clamp the hair, making sure that the hair is evenly placed inside the barrels. Be careful not to touch the scalp with the tool. Hold for 2-3 seconds. Hold for less time if hair is easy to curl, or if you want less defined waves.
4. Once you have released your first clamp, re-clamp the top barrel of waver on to the last wave bend. You want to overlap each wave with your waver to create a seamless wave from roots to ends. Repeat this process through to the ends over the whole head.
5. Once you have finished waving, make sure the hair has completely cooled down before touching to allow it to set.
6. Hold down the power button to turn off.
7. Once completely cool, store in a safe place.

WARNING: Always do a test 1cm section at the back of your hair to ensure the proper setting for your hair type & to ensure the tool is working correctly & you understand how it functions. Place on a thermal/heat resistant surface.

AS WITH MOST ELECTRICAL MACHINES, ELECTRICAL PARTS ARE ELECTRICALLY LIVE EVEN WHEN THE SWITCH IS OFF. TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

1. Always unplug appliance immediately after using. An appliance should never be left unattended when it is plugged in.
2. Do not use while bathing or sleeping.
3. Do not place or store the machine where it can fall or be pulled into a tub or sink.
4. Do not place in or drop in water or any other liquid.
5. If the tool falls into water, unplug it immediately. Do not reach into the water.
6. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
7. Always place the appliance on a heat-resistant, stable flat surface.
8. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
9. Keep cord away from the heated surfaces. Do not wrap the cord around the appliance.
10. Do not use an extension cord.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

ATTENTION

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
3. Keep appliance out of reach from young children, particularly during use and cool down.
4. Never leave appliance unattended when it is connected to a power supply. Always place the appliance on a heat-resistant, stable flat surface.
5. Do not use on wet, damp or synthetic hair.

6. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

7. Always do a strand test before using on your hair as heat can affect some hair colour, in particular on freshly coloured, grey or toned hair.

MAINTENANCE

1. To clean the unit, be sure the unit is cool and unplugged. Wipe the handle and plates with a damp cloth. No other maintenance is necessary.
2. Do not attempt to repair the appliance yourself. This appliance has no user serviceable parts.
3. Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.
4. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break, thus voiding warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

SAFETY & RECYCLING

1. Take extra care to ensure the hot plates do not contact skin or eyes.
2. Use a mirror when using the appliance to assist with safe usage.
3. Do not place tool on surfaces that are not heat resistant.
4. Polythene bags over the product and packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.
5. This appliance may not be treated as household waste. It should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service. For EU/UK disposal WEEE (Waste from Electrical and Electronic Equipment) requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately in order to optimise the recovery and recycling of the materials from which they are made and to reduce the impact on human health and the environment.

LIMITED 2-YEAR GLOBAL WARRANTY

Mermade Hair warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, Mermade Hair will replace item. Email hello@mermadehair.com for Warranty issues and provide the batch code found on the power cord. This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

MERMADE HAIR SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES OR REGISTER YOUR WARRANTY ONLINE. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow that exclusion or limitation of incidental, special, or consequential damages.

SAVE THESE INSTRUCTIONS



Mermade™

MANUFACTURER:

MERMADE HAIR PTY LTD

1/649 BEAUFORT ST, MT LAWLEY, WA, 6050

MERMADE EURP BV

KROONWIEL 2, 6003BT WEERT, NETHERLANDS

QUESTIONS OR COMMENTS:

E: HELLO@MERMADEHAIR.COM

W: WWW.MERMADEHAIR.COM

PH: (08) 6118 8408