



IONIC HAIR DRYER

Game-changing,
powerful & better
hair health

VIEW INSTRUCTIONS
& REGISTER
WARRANTY

CONSULTEZ LES INSTRUCTIONS ET
ENREGISTREZ LA GARANTIE



High Speed Ionic Professional Hair Dryer



- (a) Magnetic Filter Cap
- (b) LCD Display
- (c) Speed Switch

- (d) Heat Switch
- (e) Turn ON/OFF
- (f) Cool Air Switch

- (g) Magnetic Concentrator
- (h) Magnetic Diffuser
- (i) 2 x Curling Barrels

Automatic Self-Cleaning

Press the cool air button for 2-3 seconds when the hair dryer is on the OFF state, to turn on the self-cleaning function, the self-cleaning process will last 10 seconds.

Cleaning Reminder

After the hair dryer runs for 40hrs, "888" and "cleaning brush" will flash for 20 seconds. If the automatic cleaning is not completed after the reminder, it will remind you again for 20 seconds when you turn it on next time.

Foldable Design

Apply pressure and bend the base of the hair dryer inward.

Temperature: 80-120C/140-250F

THIS MANUAL PROVIDES SAFETY INSTRUCTIONS, DIRECTIONS AND CARE INSTRUCTIONS. PLEASE STAY SAFE.

PRODUCT: M Ionic Hair Dryer

MODEL NUMBER/S: MH7110 MH7122 MH7111 MH7123 MH7112 MH7124 MH7115 MH7125

VOLTAGE/WATTAGE: US: 125V, 60Hz, 1800W; CE/UK/CA/SAA: 220-240V, 50-60Hz, 1900W

OPERATING INSTRUCTIONS

1. Plug the dryer into the socket
2. Press down the power button to turn ON/OFF
3. Choose your nozzle/attachment. (Never touch the attachment directly after use, as it will be hot to touch. Ensure it cools down)
 - a. Concentrator: Select one section of hair (not wider than 5cm) and place the round brush underneath the hair near the roots. With the styling nozzle facing downward on your hair, move the brush and hairdryer in a single movement until it reaches the end of your hair. Repeat on other sections of hair.
 - b. Curling Barrels: Ensure the hair is 90% dry. Select one section of hair (not wider than 5cm) & let the tool wrap the hair starting from the ends around the barrel using airflow, and hold for a few seconds before releasing for smooth, voluminous curls. Each barrel rotates a different direction.
 - c. Diffuser: Place sections of damp hair into the diffuser's bowl, and use a low heat setting while gently scrunching or lifting the hair for defined, frizz-free curls.
4. Select your temperature (d).
5. Select your power setting (e). There are four settings which all emit billions of ions. Negative ions break down water molecules in wet hair, drying it faster while reducing frizz and enhancing smoothness and shine.
6. For cool air, press (f). Cool air will set your style in place.
7. Once completely cool, store in a safe place.

WARNING: AS WITH MOST ELECTRICAL MACHINES, ELECTRICAL PARTS ARE ELECTRICALLY LIVE EVEN WHEN THE SWITCH IS OFF. TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

1. Always unplug appliance immediately after using. An appliance should never be left unattended when it is plugged in.
2. Do not use while bathing or sleeping.
3. Do not place or store the machine where it can fall or be pulled into a tub or sink.
4. Do not place in or drop in water or any other liquid.
5. If the tool falls into water, unplug it immediately. Do not reach into the water.
6. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
7. Always place the appliance on a heat-resistant, stable flat surface.
8. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
9. Keep cord away from the heated surfaces. Do not wrap the cord around the appliance.
10. Do not use an extension cord.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

ATTENTION

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
3. Keep appliance out of reach from young children, particularly during use and cool down.
4. Never leave appliance unattended when it is connected to a power supply. Always place the appliance on a heat-resistant, stable flat surface.
5. Do not use on wet, damp or synthetic hair.



SAFETY & RECYCLING

1. Take extra care to ensure the hot plates do not contact skin or eyes.
2. Use a mirror when using the appliance to assist with safe usage.
3. Do not place tool on surfaces that are not heat resistant.
4. Polythene bags over the product and packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.
5. This appliance may not be treated as household waste. It should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service. For EU/UK disposal WEEE (Waste from Electrical and Electronic Equipment) requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately in order to optimise the recovery and recycling of the materials from which they are made and to reduce the impact on human health and the environment.



LIMITED 3-YEAR GLOBAL WARRANTY

Mermade Hair warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, Mermade Hair will replace item. Email hello@mermadehair.com for Warranty issues and provide the batch code found on the power cord. This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

MERMADE HAIR SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THREE YEARS FROM DATE OF ORIGINAL PURCHASE. KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES OR REGISTER YOUR WARRANTY ONLINE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow that exclusion or limitation of incidental, special, or consequential damages.



M by *Mermade*™

MANUFACTURER:
MERMADE HAIR PTY LTD
1/649 BEAUFORT ST., MT LAWLEY, WA, 6050
MERMADE EURP BV
KROONWIEL 2, 6003BT WEERT, NETHERLANDS

QUESTIONS OR COMMENTS:
E: HELLO@MERMADEHAIR.COM
W: WWW.MERMADEHAIR.COM
PH: (08) 6118 8408